




PALADIA PERIMETER SERIES SAFETY AND INSTALLATION INSTRUCTIONS

CORNER INSTALLATION

ILLUSTRATED AT RIGHT ARE FITTINGS SUPPLIED FOR CONTINUOUS FASCIA AROUND 90° INSIDE AND OUTSIDE CORNERS. APPROPRIATE FITTINGS WOULD BE SUPPLIED FOR CORNERS OTHER THAN 90°.

STEP 1: INSTALL CONDUIT AROUND CORNER

- REMOVE KNOCKOUTS FROM WIREWAY END PLATES (FIG. 6).
- DETERMINE CORRECT LENGTH FOR FLEXIBLE CONDUIT ASSEMBLY AND SHORTEN IF NECESSARY. SNAP EACH END OF THE FLEXIBLE CONDUIT ASSEMBLY INTO WIREWAY END PLATES (FIG. 6).
- CONNECT QUICK CONNECT PLUGS FROM WIREWAY TO FLEXIBLE CONDUIT ASSEMBLY.

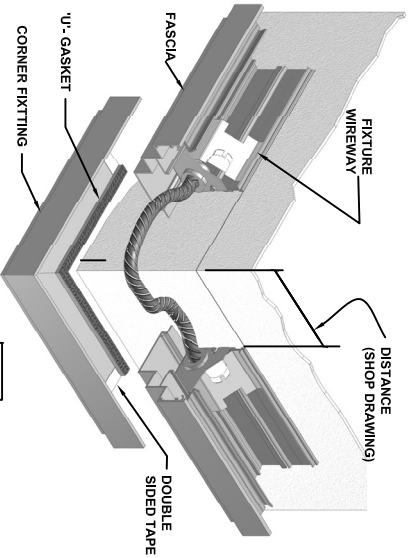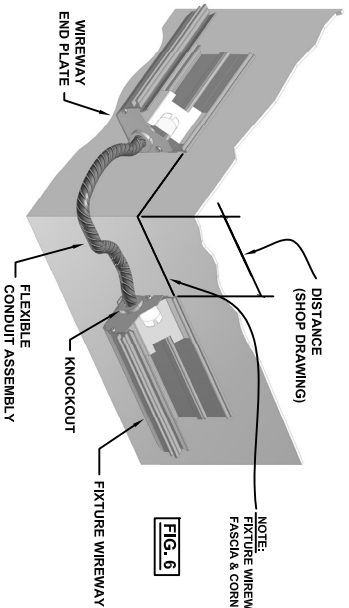

- ### STEP 2: INSTALL FASCIA & CORNER FITTINGS.
- INSTALL FASCIA ON FIXTURE WIREWAYS AS PREVIOUSLY OUTLINED, MAINTAINING DISTANCE FROM CORNER AS INDICATED ON SHOP DRAWING.
 - LOCATE DOUBLE SIDED TAPE ON EACH LOWER LEG OF CORNER FITTING AND REMOVE PROTECTIVE COVER FROM TAPE, LEAVING TACKY SURFACE EXPOSED.
 - TO ATTACH CORNER FITTING, START UNDERNEATH THE FASCIA AT CORNER AND PUSH CORNER FITTING LIP UP UNTIL IT SNAPS OVER THE TOP OF FASCIA. THE DOUBLE SIDED TAPE WILL STABILIZE THE LOWER BACK FLANGE OF THE CORNER FITTING. MAKE SURE THE CORNER FITTING IS ALIGNED CORRECTLY PRIOR TO PRESSING IT INTO PLACE AS IT CANNOT BE ADJUSTED AFTER INSTALLATION. (FIG. 7)

PALADIA PERIMETER SERIES SAFETY AND INSTALLATION INSTRUCTIONS



CAUTION:

- BE CERTAIN THAT POWER TO FIELD WIRING HAS BEEN TURNED OFF PRIOR TO INSTALLATION.
- CONNECTIONS TO FIELD WIRES AND GROUNDING OF FIXTURES MUST BE DONE IN ACCORDANCE WITH APPLICABLE LOCAL & NATIONAL CODES. INSTALLATION MUST BE PERFORMED BY QUALIFIED PERSONNEL.
- IT IS INSTALLERS RESPONSIBILITY TO ENSURE THAT WALL IS STRUCTURALLY CAPABLE OF SUPPORTING WEIGHT OF FIXTURE.
- BE CERTAIN THAT SUPPLY VOLTAGE IS THE SAME AS THAT MARKED ON BALLASTS AND TRANSFORMERS.

SINGLE FIXTURE INSTALLATION

STEP 1: MOUNT FIXTURE WIREWAY ASSEMBLY

- USING FIXTURE WIREWAY ASSEMBLY AS A TEMPLATE, CENTER THE 1 1/4" WIREWAY HOLE OVER PREVIOUSLY INSTALLED SWITCH BOX.
- LEVEL WIREWAY ASSEMBLY AND MARK MOUNTING HOLES ON WALL.
- DRILL HOLES APPROPRIATE FOR MOUNTING SURFACE AND FASTENERS TO BE USED (#12 SCREWS RECOMMENDED).
- SECURE FIXTURE WIREWAY ASSEMBLY TO WALL WITH APPROPRIATE FASTENERS (BY OTHERS).
- JOIN SUPPLY WIRES TO WIREWAY ASSEMBLY LEADS USING 90° C MIN. RATED WIRES AND CONNECTORS.
- ALL WIRE CONNECTIONS SHOULD REMAIN INSIDE SWITCH BOX.

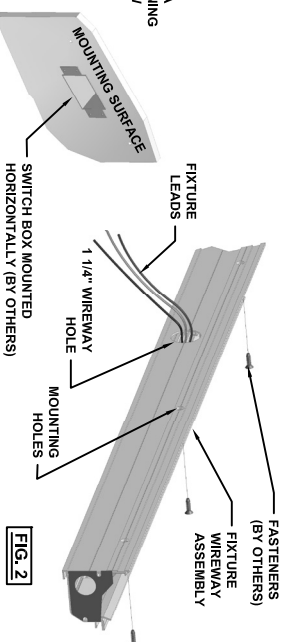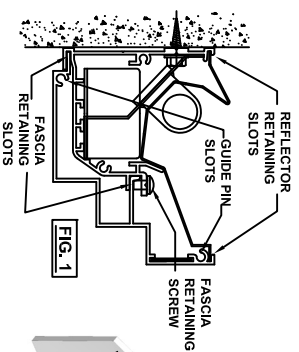


STEP 2: MOUNT FASCIA TO WIREWAY ASSEMBLY

- BACK OFF FASCIA RETAINING SCREWS.
- FIT FASCIA INTO FRONT & LOWER RETAINING SLOTS ON FIXTURE WIREWAY ASSEMBLY AS ILLUSTRATED IN FIG. 1.
- CENTER FASCIA ON WIREWAY ASSEMBLY (FASCIA SHOULD OVERTLAP EACH END OF WIREWAY BY APPROX. 1/8") AND TIGHTEN RETAINING SCREWS.
- INSTALL END CAPS ON FASCIA BY ALIGNING GUIDE PIN SLOTS WITH END CAP GUIDE PINS AND PUSH UNTIL END CAPS ARE FULLY SEATED ON FASCIA.

STEP 3: INSTALL REFLECTOR AND LAMP

- PRIOR TO INSTALLING REFLECTOR, NOTE REFLECTOR ORIENTATION AS SHOWN IN ILLUSTRATION (FIG. 1).
- INSTALL REFLECTOR LIP IN REFLECTOR RETAINING SLOT ON FASCIA FIRST. SQUEEZE REFLECTOR SLIGHTLY & SNAP OPPOSITE REFLECTOR LIP INTO RETAINING SLOT ON FIXTURE WIREWAY INTO LAMP HOLDERS AND ROTATE LAMP 90° UNTIL A DISTINCT CLICK IS HEARD, INDICATING LAMP IS FULLY ENGAGED.
- ENERGIZE CIRCUIT AND CHECK FOR PROPER OPERATION.

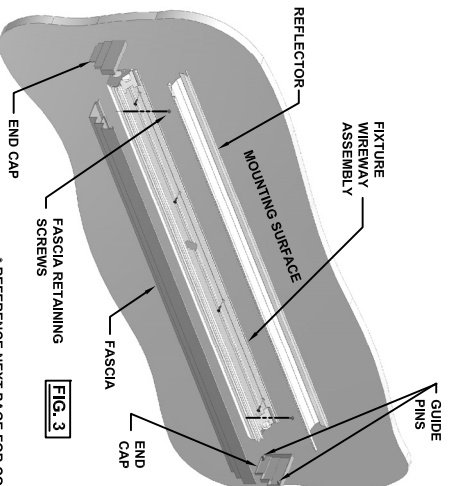

- REFERENCE NEXT PAGE FOR CONTINUOUS ROW INSTALLATION.
- REFERENCE BACK PAGE FOR CORNER INSTALLATION.



Precision Architectural Lighting

4830 Timber Creek Drive Houston, Texas 77017

Tel (713) 946-4343 Fax (713) 946-4441 www.palighting.com

3750047-1-4109

PAL RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS WITHOUT NOTICE. REFER TO THE MOST RECENT PRODUCT INFORMATION FOR MOST RECENT PRODUCT INFORMATION.



Precision Architectural Lighting

4830 Timber Creek Drive Houston, Texas 77017

Tel (713) 946-4343 Fax (713) 946-4441 www.palighting.com

3750047-1-4109

PAL RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS WITHOUT NOTICE. REFER TO THE MOST RECENT PRODUCT INFORMATION FOR MOST RECENT PRODUCT INFORMATION.

PALADIA PERIMETER SERIES SAFETY AND INSTALLATION INSTRUCTIONS

CONTINUOUS ROW INSTALLATION

NOTE: A FACTORY SHOP DRAWING IS PROVIDED FOR ALL CONTINUOUS ROW AND PATTERN INSTALLATIONS. IF YOU ARE NOT IN POSSESSION OF A DRAWING, CONTACT YOUR LOCAL P.A.L. REPRESENTATIVE OR THE FACTORY TO OBTAIN ONE.

STEP 1: INSTALL FIXTURE WIREWAY ASSEMBLIES

- * INSTALL FIRST WIREWAY ASSEMBLY AS OUTLINED IN STEP 1 ON PREVIOUS PAGE.
- * INSTALL REMAINING FIXTURE WIREWAYS IN A SIMILAR FASHION, BUTTING THEM END-TO-END UNTIL DESIRED ROW LENGTH IS ACHIEVED.

CAUTION: ALIGN WIREWAYS ACCURATELY AT JOINTS TO ENSURE FASCIA WILL FIT PROPERLY.

- * JOIN PREWIRED QUICK CONNECT WIRE HARNESS BETWEEN WIREWAY HOUSINGS, ROUTING LEADS NEAR BOTTOM OF WIREWAY.
- * **CAUTION:** BE SURE THAT WIRES ARE NOT "PINCHED" AT WIREWAY JOINTS.

STEP 2: INSTALL FASCIA

- * PRIOR TO INSTALLING FIRST FASCIA, ATTACH END CAP (IF REQUIRED) AND THEN INSTALL FASCIA AS OUTLINED IN STEP 2 ON PREVIOUS PAGE.
- * SLIDE AN ALIGNER PLATE INTO RETAINER SLOTS ON NEXT FASCIA (FIG. 4) AND ASSEMBLE ONTO FIXTURE WIREWAY. POSITION ALIGNER PLATE SO THAT IT "SPANS" THE FASCIA JOINT, MAINTAINING CORRECT FASCIA ALIGNMENT AND TIGHTEN FASCIA RETAINING SCREWS TO SECURE FASCIA IN POSITION.

- * INSTALL REMAINING FASCIAS IN A SIMILAR MANNER. FASCIAS MAY BE ADJUSTED LEFT OR RIGHT BY LOOSENING RETAINING SCREWS AND RE-TIGHTENING AFTER ADJUSTMENT IS MADE.

- * INSTALL END CAP ON THE LAST FASCIA (IF REQUIRED) BEFORE IT IS ASSEMBLED TO WIREWAY ASSEMBLY.

NOTE:

IN INSTANCES WHERE FASCIA EXTENDS BEYOND FIXTURE WIREWAY, INSTALL 'U' GASKET PROVIDED ON LOWER HORIZONTAL FLANGE OF FASCIA. GASKET SHOULD BE TRIMMED TO THE SAME LENGTH THAT FASCIA EXTENDS BEYOND WIREWAY HOUSING. (FIG. 5)

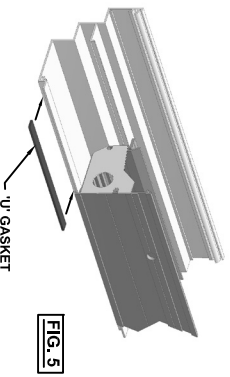


FIG. 5

STEP 3: COMPLETE INSTALLATION

- * INSTALL REFLECTOR & LAMPS AS OUTLINED ON PREVIOUS PAGE.
- * ENERGIZE CIRCUIT AND CHECK FOR PROPER OPERATION.

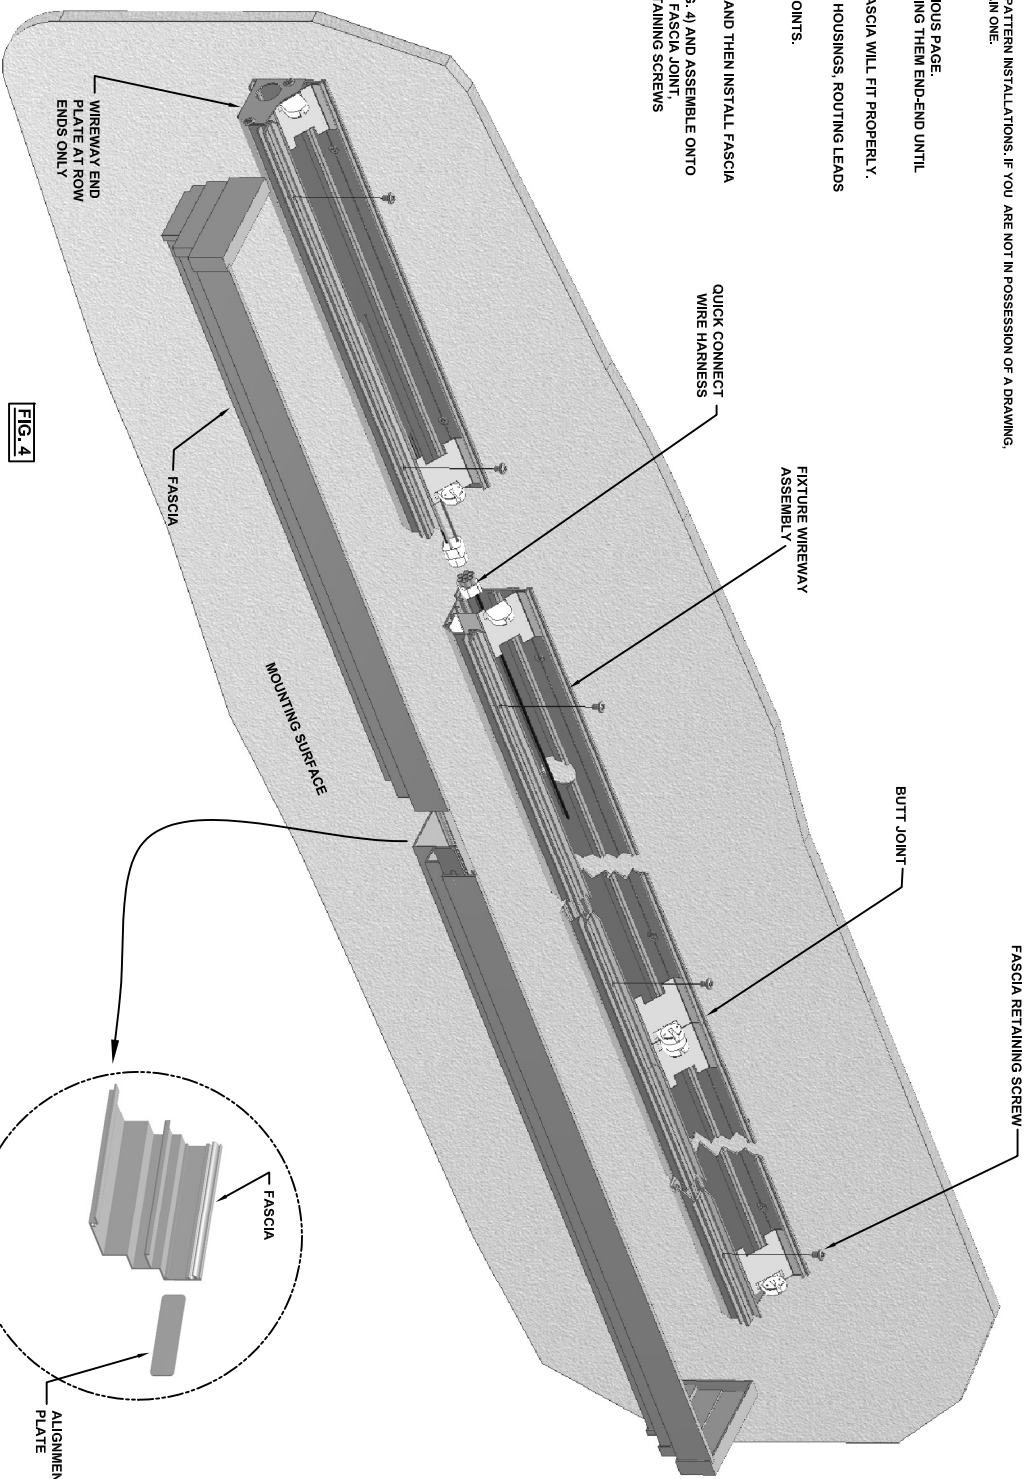


FIG. 4



Precision Architectural Lighting

4830 Timber Creek Drive Houston, Texas 77017
Tel: (713) 946-4343 Fax: (713) 946-4441 www.palighting.com

P.A.L. RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS. CONTACT FACTORY FOR MOST RECENT PRODUCT INFORMATION.

3750047-2/3 4/09