

# P300/P400 SERIES NON FEED STEM ASSEMBLY SAFETY AND INSTALLATION INSTRUCTIONS


## CAUTION:

- \* BE CERTAIN THAT POWER TO FIELD WIRING HAS BEEN TURNED OFF PRIOR TO INSTALLATION.
- \* THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- \* IT IS INSTALLER'S RESPONSIBILITY TO ENSURE THAT MOUNTING SURFACE IS STRUCTURALLY CAPABLE OF SUPPORTING WEIGHT OF FIXTURE.
- \* BE CERTAIN THAT SUPPLY VOLTAGE IS THE SAME AS THAT MARKED ON FIXTURE.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.

## CAUTION

DUE TO WEIGHT CONSIDERATIONS, MOUNTING BRACKET SHOULD BE SECURED DIRECTLY TO STRUCTURAL SUPPORT

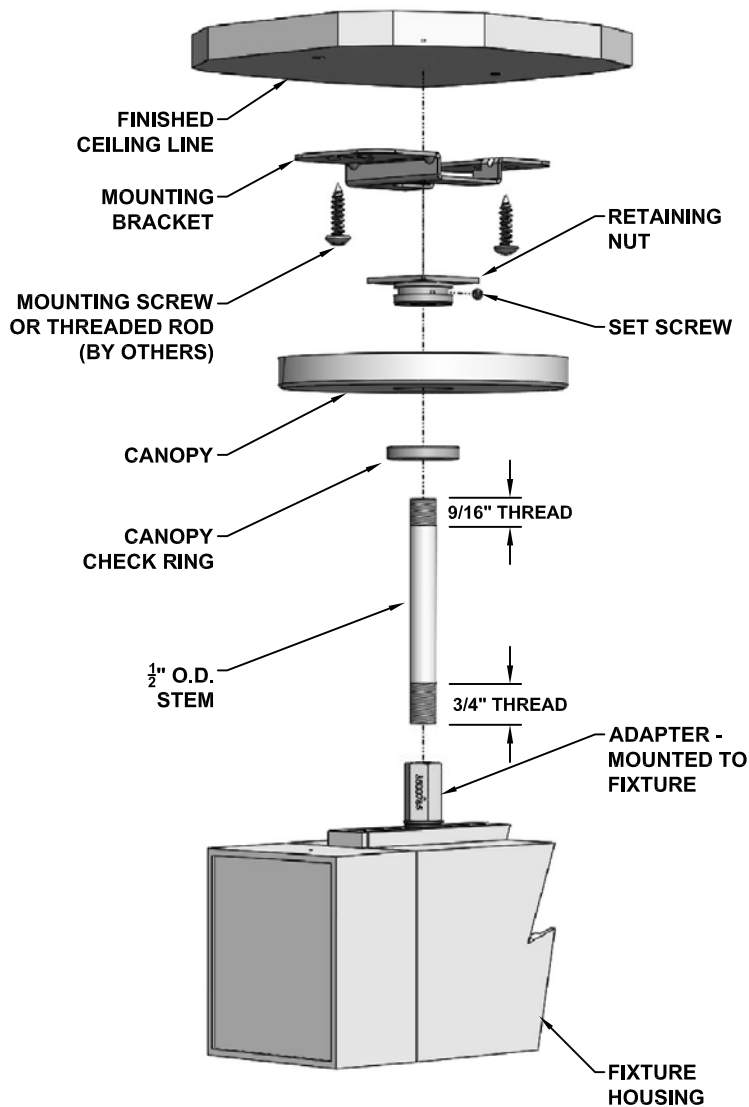

## STEP 1:

DETERMINE STEM MOUNTING SPACING (FROM FACTORY SHOP DRAWING) AND SECURE MOUNTING BRACKETS IN APPROPRIATE LOCATION WITH SUITABLE FASTENERS (FASTENERS NOT PROVIDED).

## STEP 2:

SCREW STEM INTO STEM ADAPTER MOUNTED ON FIXTURE.

## STEP 3:

PLACE CANOPY CHECK RING & CANOPY OVER STEM AS ILLUSTRATED. THREAD RETAINING NUT ON END OF STEM AS ILLUSTRATED AND LOCK INTO PLACE WITH SET SCREW.

## STEP 4:

RAISE FIXTURE/STEM ASSEMBLY AND POSITION NEXT TO PREVIOUSLY INSTALLED MOUNTING BRACKET. SHIFT ASSEMBLY TOWARDS AND INTO MOUNTING BRACKET AND RELEASE. BE SURE THAT RETAINING NUT IS FULLY SEATED IN RECESS OF MOUNTING BRACKET.

## STEP 5:

RAISE CANOPY TO CEILING AND SECURE BY THREADING CANOPY CHECK RING ONTO RETAINING NUT.

