

# P.A.L. WIDESPREAD OPTIC INSTALLATION & REMOVAL INSTRUCTIONS

## OPTIC INSTALLATION

### STEP 1:

FOR BEST RESULTS READ ALL INSTRUCTIONS FIRST BEFORE INSTALLING OR REMOVING OPTICS. TURN OFF FIXTURE POWER SUPPLY. REMOVE ANY DUST COVERS. (FIG 1)

### STEP 2:

LOCATE FIXTURE OPTICS AND LAY THEM ON A FLAT SURFACE END TO END. MEASURE TO VERIFY PROPER FIT LENGTH.


### STEP 3:

START AT ONE END PRESSING OPTICS INTO PLACE BETWEEN RETAINING CLIP LEGS. LOCATE ONE SIDE OF OPTIC AGAINST RETAINING CLIP AND ROTATE OTHER SIDE UNDER THE OPPOSITE CLIP. PRESS FLAT.

### STEP 4:

REPLACE DUST COVERS AND CONTINUE FIXTURE INSTALLATION.

**NOTE: MISSING OR MISALIGNED OPTIC RETAINING CLIPS CAN BE REPOSITIONED AFTER REMOVING REFLECTOR.**

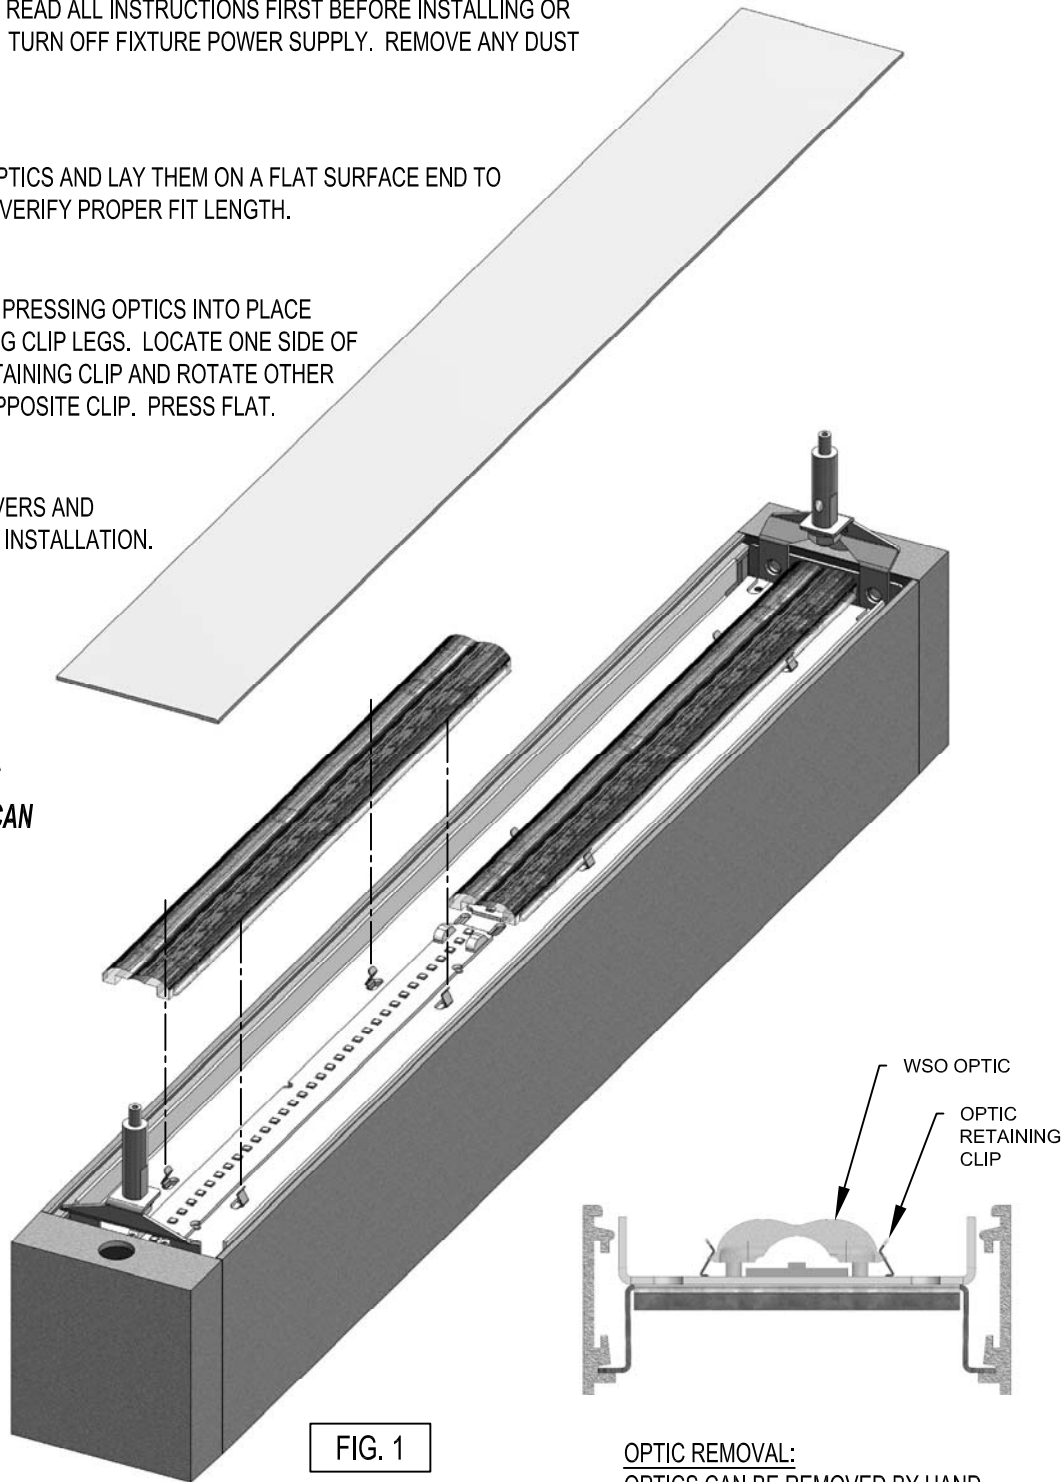

**OPTIC REMOVAL:**  
OPTICS CAN BE REMOVED BY HAND.  
PULL OPTIC CAREFULLY UNTIL CLEAR  
OF RETAINING CLIPS.

